

RC 18T/MT TROUBLESHOOTING

If you have any problems with the operation of your RC18T/MT racing truck, please consult the following list of common occurrences. If you are still experiencing difficulty, please contact us.

Description	Problem	Solution
No power	Battery is discharged..... Battery not plugged in..... No light on speed control.....	Charge battery. Plug battery in. Reset speed control using your instruction manual.
No throttle	Motor not plugged in..... Speed control out of adjustment..... Motor failure..... Speed Control failure.....	Plug motor in. Reset speed control using your instruction manual. Replace motor. Plug speed control into channel 2 on receiver.
No steering	Servo not plugged in..... Locked up steering linkage..... Servo failure.....	Plug servo into channel 1 on receiver. Free up steering linkage. Replace servo.
Throttle	Goes backwards when you pull the trigger,... or forward when pushing brakes/reverse.	Check throttle reversing switches on transmitter. Reset speed control.
Steering	Goes right when turning the wheel left.....(or left when turned right.)	Check steering reversing switches on transmitter.
Truck is glitching	Truck has a problem on power..... Truck takes off.....	Check motor capacitors, loose wires or crystals. Check for loose wires, dead radio batteries or loose crystals.
Reverse	No reverse or brakes.....	Reset speed control, or send in for repair.
Truck dies or slows	Speed control overheats..... Motor overheats..... Gear mesh set too tight.....	Let speed control cool. Let motor cool and check recommended gearing for motor type. Reset gear mesh (see instruction manual).

