



## QUICK-START GUIDE

Before you start running your factory assembled TC4, review your Instruction Manual and this Quick-Start Guide.

Description	Problem	Solution
No power	Battery is discharged ..... Battery not plugged in ..... No light on speed control .....	Charge battery. Plug battery in. Reset speed control using your instruction manual.
No throttle	Motor not plugged in ..... Speed control out of adjustment ..... Motor failure .....	Plug motor in. Reset speed control using your instruction manual. Replace motor.
No steering	Servo not plugged in ..... Locked up steering linkage ..... Servo failure .....	Plug servo in. Examine and free up steering linkage. Replace servo.
Throttle	Goes backwards when you pull ..... the trigger, or forward when pushing brakes/reverse.	Check throttle reversing switches on transmitter (refer to transmitter instruction manual). Reset speed control.
Steering	Goes right when turning the wheel ..... left (or left when turned right)	Check steering reversing switches on transmitter (refer to transmitter instruction manual).
TC4 is glitching	TC4 has a problem on power ..... TC4 takes off .....	Check motor capacitors, loose wires, crystals, or worn motor brushes. Check for loose wires, dead radio batteries or loose crystals.
Reverse	No reverse or brakes .....	Reset speed control (refer to your speed control's instruction manual), or send in for repair.
TC4 dies or slows	Speed control overheats ..... Motor overheats ..... Gear mesh set too tight .....	Let speed control cool. Let motor cool and check recommended gearing for motor type. Reset gear mesh (see instruction manual).

### Contact Us:

#### Associated Electrics, Inc.

3585 Cadillac Ave. • Costa Mesa, CA 92626 USA • Tel: 714.850.9342 • Fax: 714.850.1744

On the Web: [www.TeamAssociated.com](http://www.TeamAssociated.com) • [www.RC10.com](http://www.RC10.com)

© 2005 Associated Electrics, Inc.

