


# #1705 NTC3 ONE-WAY FRONT DIFFERENTIAL

- 1 Remove the front differential from your car and retain the shims and #3976 bearings.
- 2 Install the #3939 ring gear onto the #3967 one-way hub using the four #9146 screws.
- 3 Using a small Allen wrench, apply a small amount of the #6636 Associated diff lube to the inside of the one-way bearings. Also apply a thin coat of lube to the #1707 one-way outdrive shafts. Then install the #1707 outdrives into each end of the #3967 one-way hub.
- 4 Install the #5407 O-rings into each outdrive.
- 5 Install the one-way assembly into the front transmission housing, using one of the outdrive shims and #3976 bearings on each side.

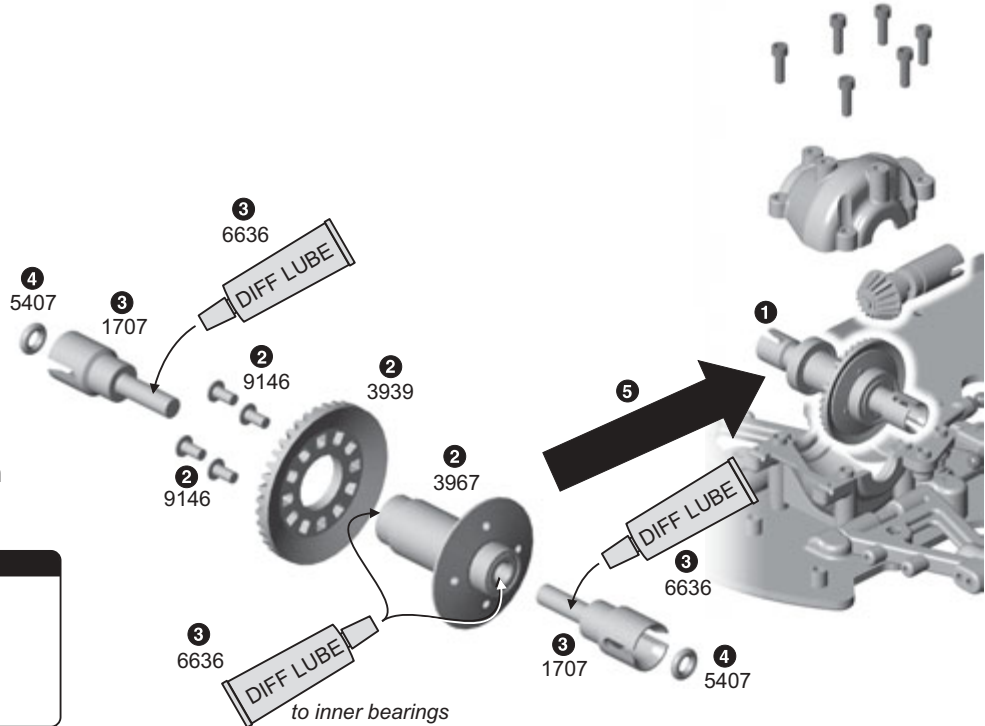

## MAINTENANCE

Try to keep your one-way diff as clean as possible. Occasionally re-apply a small amount of the #6636 Associated diff lube to the bearings and outdrive shafts.

**TEAM ASSOCIATED**  
3585 Cadillac Ave.  
Costa Mesa, CA 92626



phone: (714) 850-9342  
fax: (714) 850-1744  
web site: <http://www.teamassociated.com>