
## Installation

*Step 1* Use the below Drill Guide to properly align your XP Police Light Bar to Your RC vehicle. Tape the drill guide to your body, making sure to center the guide on your vehicle's roof.

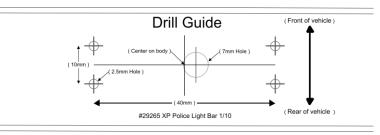

**Step 2** Drill the holes indicated on the drill guide: four 2.5mm holes and one 7mm hole. Once you are finished drilling, remove the drill guide.

*Step 3* Disconnect the 2-button switches and 9v battery connection/power switch from the light bar and pass the light bar wires through the 7mm hole. Use the four supplied 2 x 16mm screws and nuts to attach the light bar to your vehicle.

Step 4 Attach a 9v battery (not included) to the battery plug.

Step 5 Mount the battery/power switch and two push-button switches to the inside of the body.

## **Operating Instructions**

The Police Light bar system has two push-button switches, one for the front (blue and red) LEDs and one for the rear yellow LEDs. You can cycle through the six LED flash patterns by pressing those buttons.

## Warranty Information

Your Team Associated LED light kit is warranted to the original purchaser for 30 days from the date of purchase, verified by the sales receipt, against defects in material and workmanship. Product that has been mishandled, abused, used incorrectly, used for an application other than intended, or damaged by the user are not covered under warranty. Associated Electrics, Inc. is not liable for any loss or damage, whether direct or indirect, incidental or consequential, or from any special situation, arising from the use, misuse, or abuse of this product.

Team Associated 26021 Commercentre Dr. Lake Forest, CA 92630

Phone: (949) 544-7500 Fax: (949) 544-7501 Email: service@aeteam.net





