


GATE 02 IFS2 CONVERSION KIT

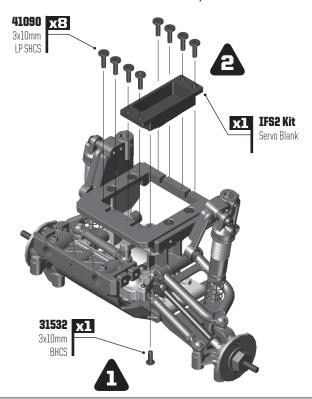

NOTE: Remove the #31532 3x8mm BHCS that connects the servo horn to the servo blank first. Then remove the LP SHCS and servo blank. Save the hardware for installation on your chassis.





NOTE: Install the skid plate with two #25202 3x10mm FHCS. You are now ready to install the IFS to your chassis!

