

# #9577 B4 and T4 INLINE STEERING AXLE

## INLINE AXLE


### TO INSTALL:

- 1 Insert spacer where shown to move caster block to rearward position.
- 2 Move ball end to rearward hole in rack.
- 3 Install #9577 inline steering block.
- 4 For buggy (shown), install #9623 axle.  
For truck, install #7459 axle.
- 5 Repeat for the right side.

## TRAILING AXLE

### TO INSTALL:

- 1 Insert spacer where shown to move caster block to forward position.
- 2 Move ball end to forward hole in rack.
- 3 Install kit's #9581 trailing steering block.
- 4 For buggy (shown), install #9613 axle.  
For truck, install #7456 axle.
- 5 Repeat for the left side.

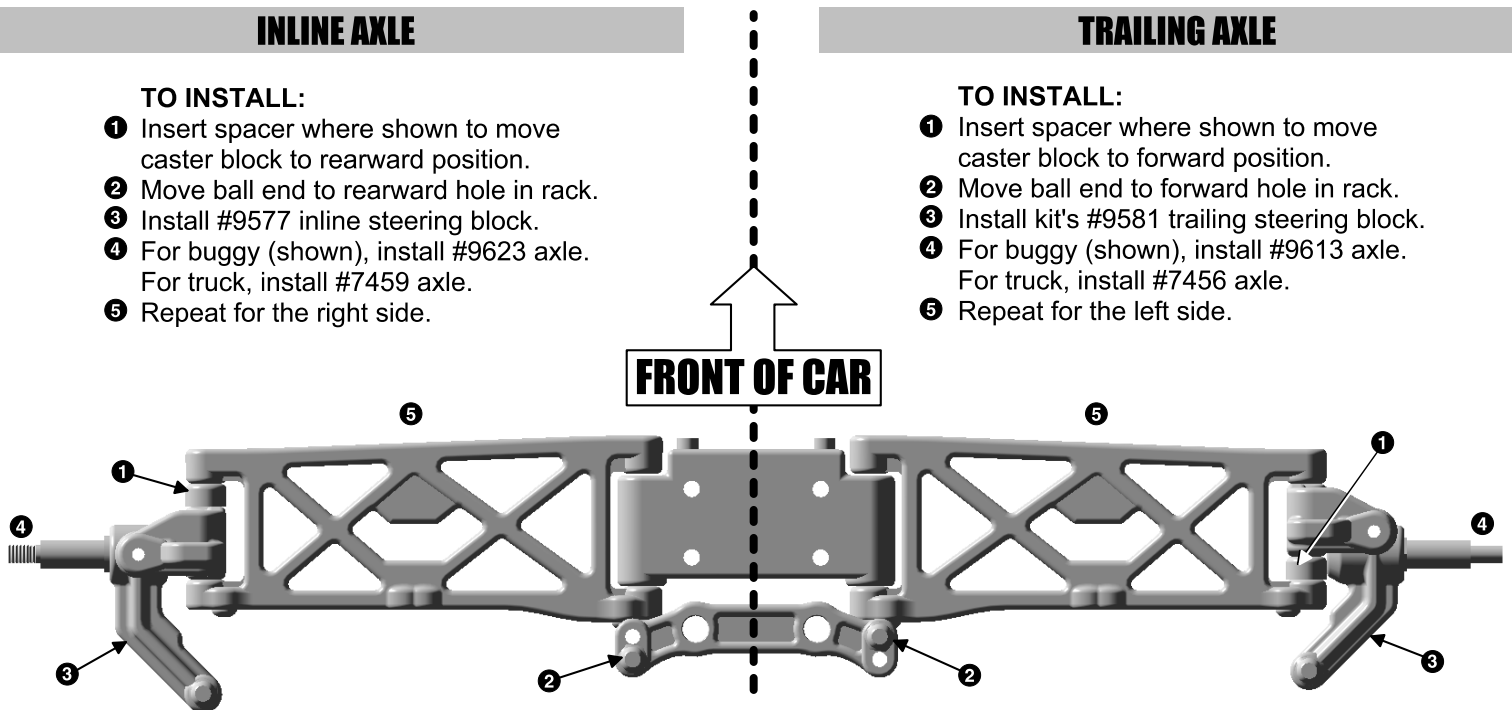

TEAM ASSOCIATED  
3585 Cadillac Ave.  
Costa Mesa, CA 92626



phone: (714) 850-9342  
fax: (714) 850-1744  
web site: <http://www.TeamAssociated.com/>

#AE-9577