

NOTE: These notes replace that of Fig. 17 on page 8.

Figs. 16a & 17--Push up through the chassis the short 4/40 flat head allen screw in the front and the longer screw in the rear. Slide a T-bar pivot shim onto each screw. Mount the T-bar onto the chassis as shown in Fig. 17, page 8, with a locknut on the front screw and plain nut on the rear.

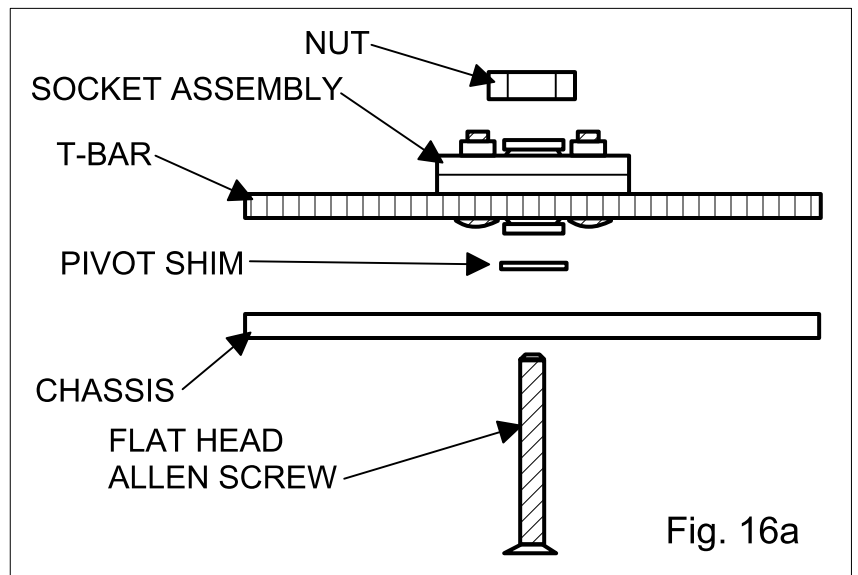


Fig. 16a