


SUPPLEMENTARY SHEET

FOR THE #7036 T2 KIT

Disregard the instructions for figs. 82 & 83 in the manual and replace them with the following.

Figs. 82, 82A & 83 Go back to your transmission bag and locate the bag containing the #7370 black aluminum motor plate. Remove the #7373 motor plate foam gasket from its bag. Cut an "X" in the center of the foam gasket paper backing and then, using your hobby knife, lift one edge of the cut area with the blade tip until you can remove the paper. Affix the #7373 gasket to the same side of motor plate as the motor plate guard tabs as shown in fig. 82a.

Now slide the motor plate over the drive shaft and secure it to the motor plate spacers with the #6928 screws. Make sure your motor plate is installed as shown in fig. 83 with the motor guard tabs on the transmission case side.

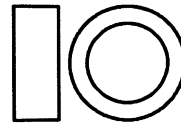

#7373
foam gasket
(actual size)

You can now go back to the original manual's steps, starting with fig. 84, to complete your RC10T2 kit.

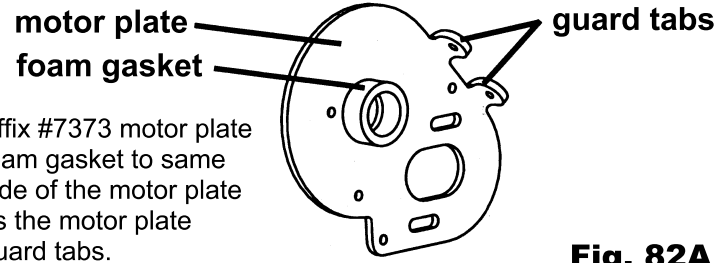


Fig. 82A